3. Disassembly and Reassembly

3-1. Cabinet and PCB

3-1-1 Ass'y Cover Housing Removal

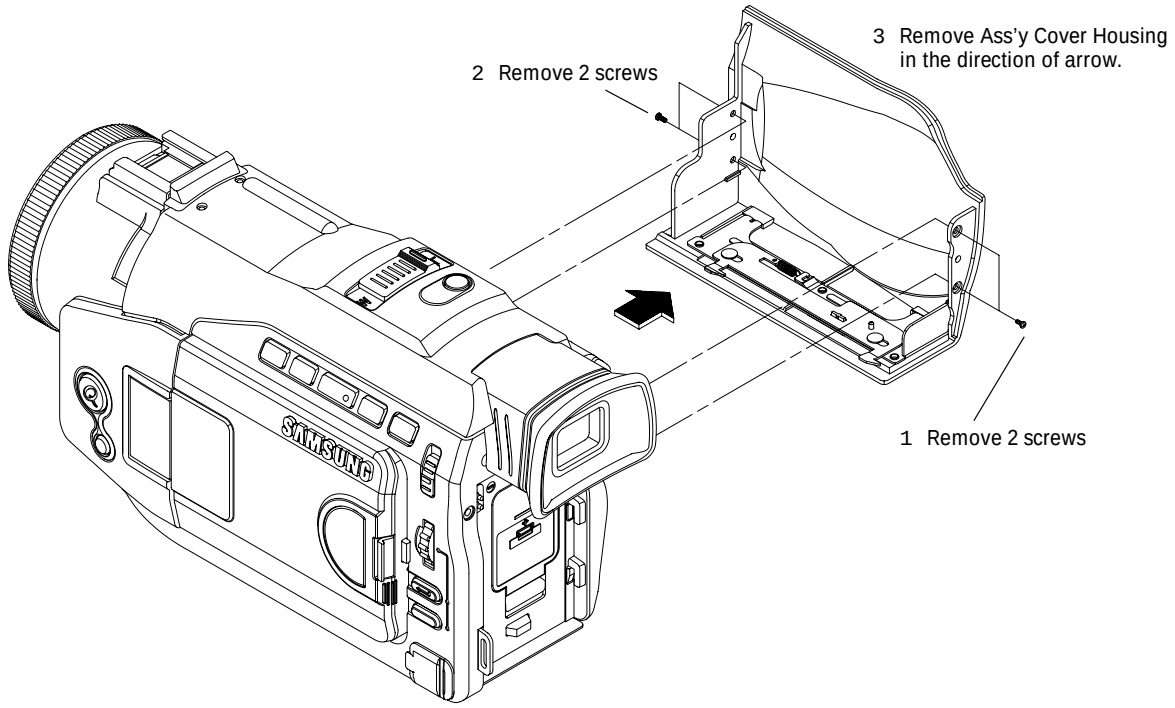

Fig. 3-1 Ass'y Cover Housing Removal

3-1-2 Ass'y Front Removal

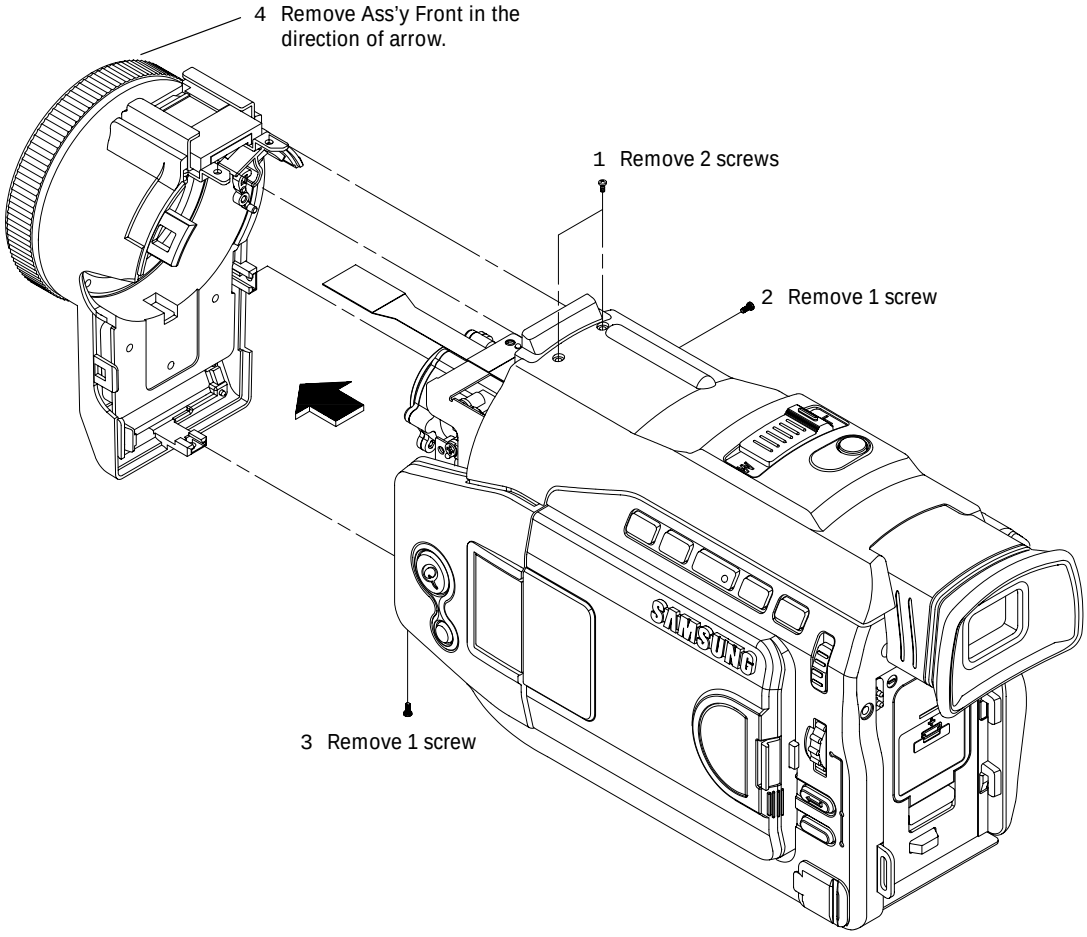

Fig. 3-2 Ass'y Front Removal

3-1-3 Ass'y Left Removal

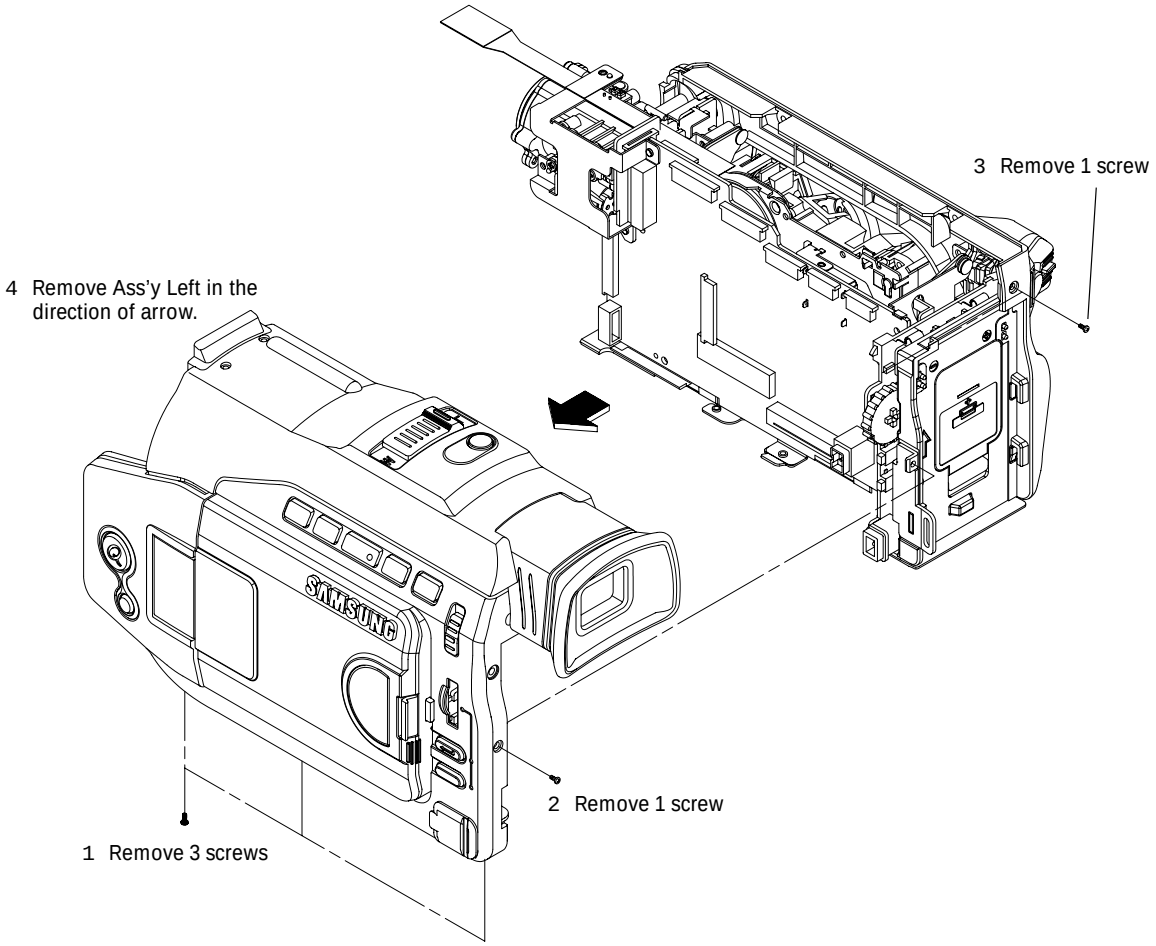

Fig. 3-3 Ass'y Left Removal

3-1-4 Ass'y Top Removal

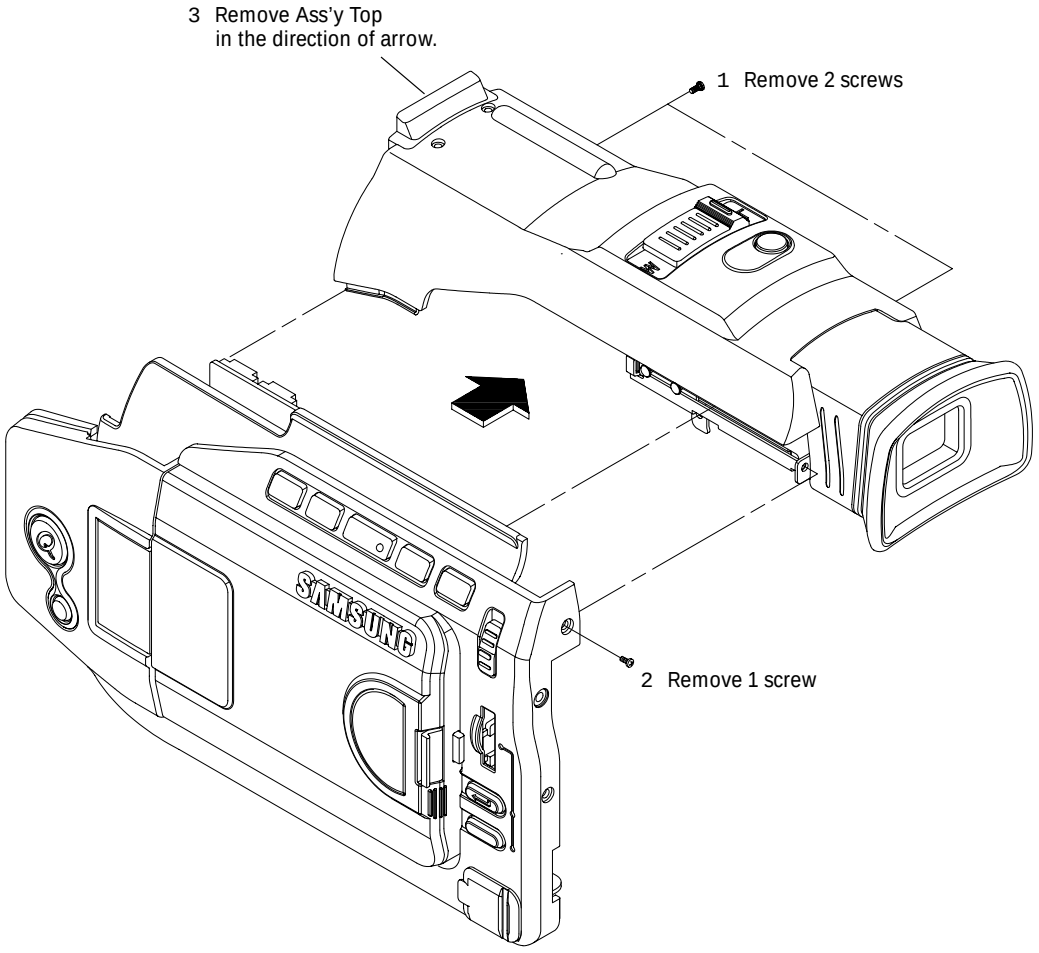

Fig. 3-4 Ass'y Top Removal

3-1-5 Ass'y EVF Removal

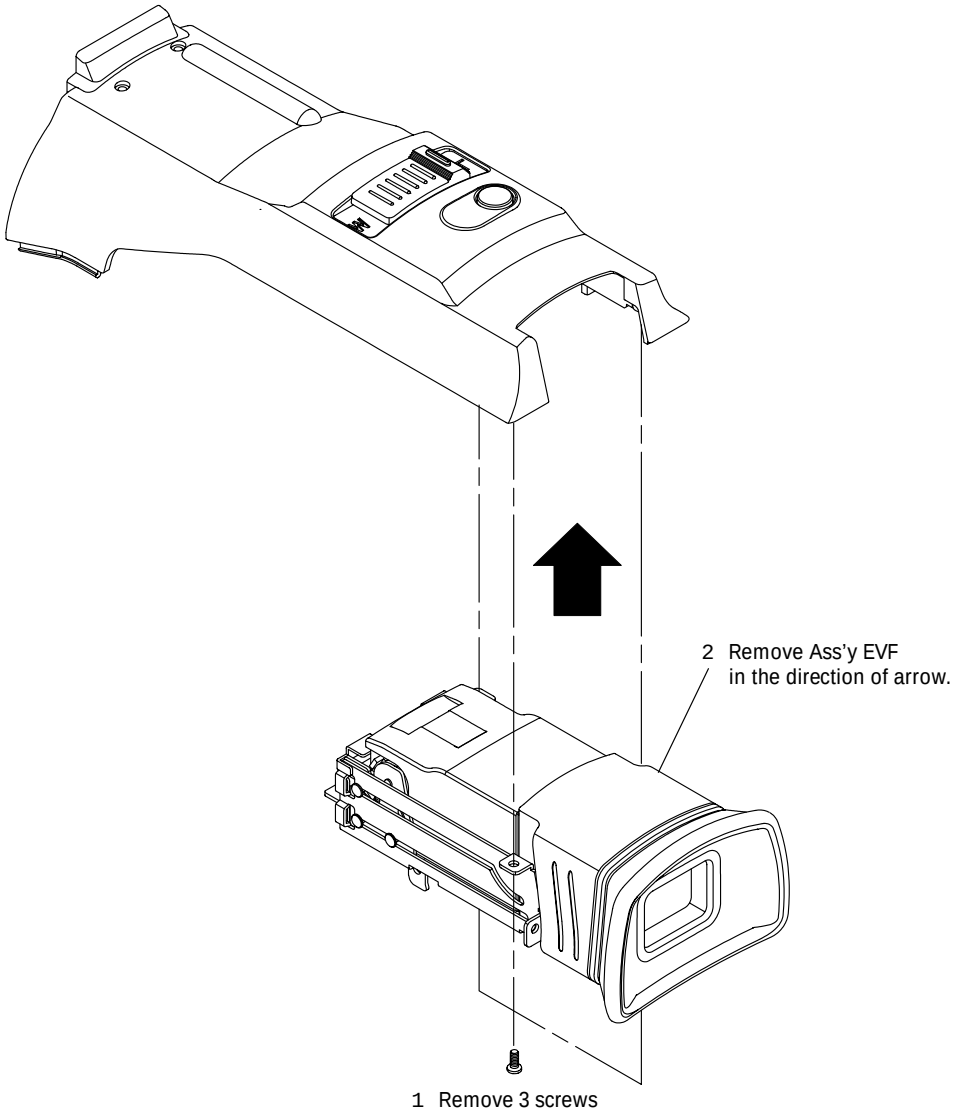

Fig.3-5 Ass'y EVF Removal

3-1-6 Ass'y LCD&Ass'y Cover Left Removal

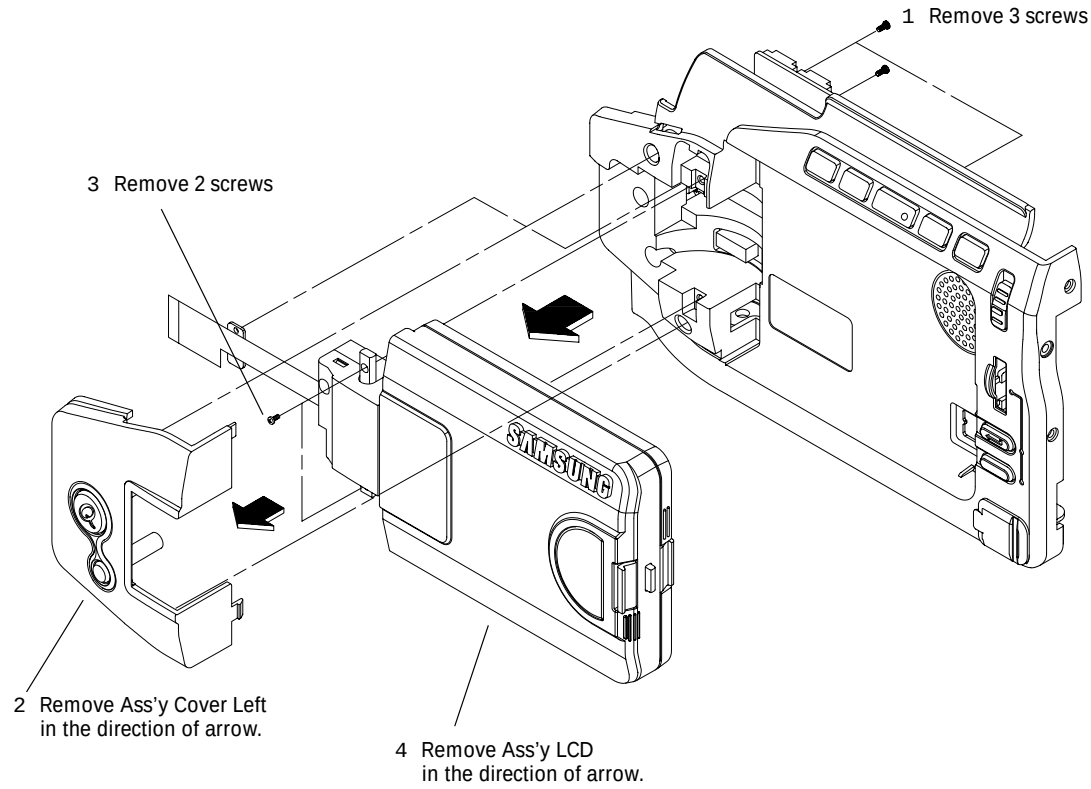
1 Remove 3 screws
3 Remove 2 screws
SAMSUNG
2 Remove Ass'y Cover Left
in the direction of arrow.
4 Remove Ass'y LCD
in the direction of arrow.

Fig. 3-4 Ass'y LCD&Ass'y Cover Left Removal

3-1-7 Ass'y Main PCB Removal

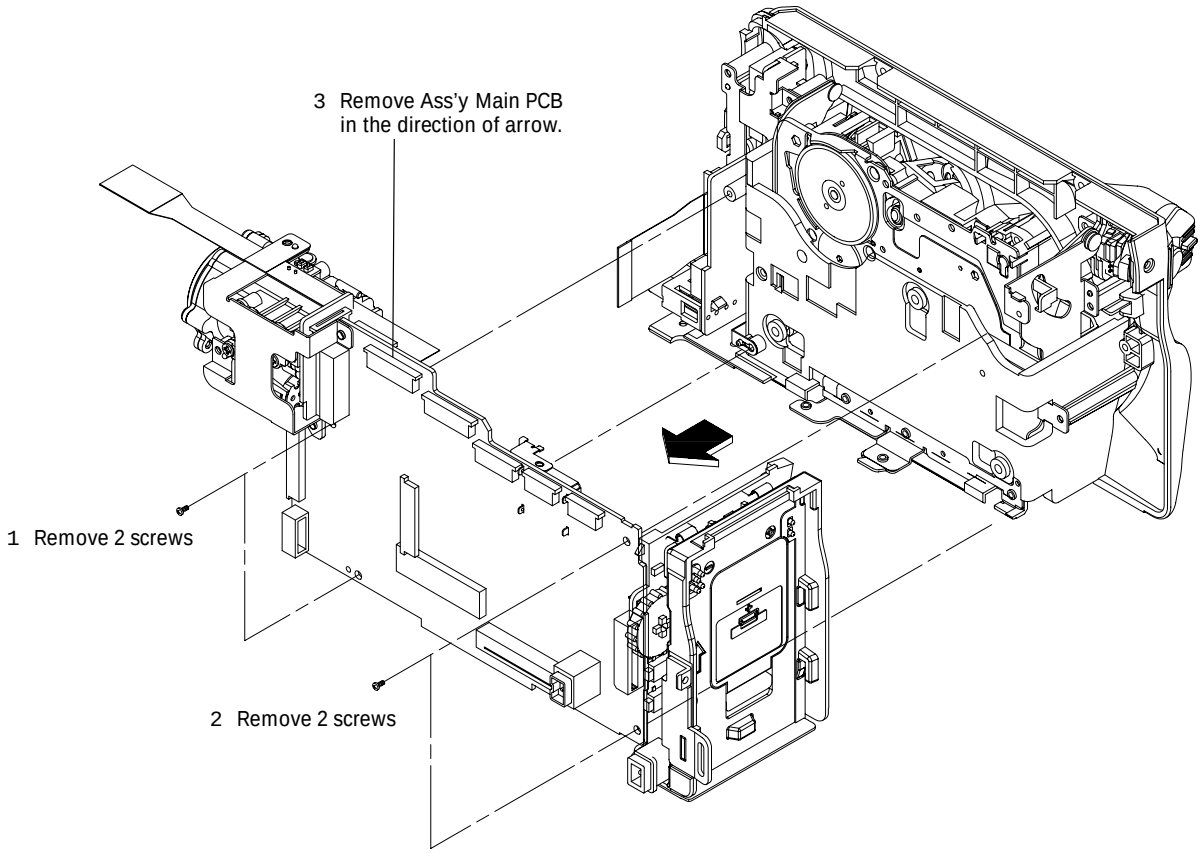

Fig. 3-7 Ass'y Main PCB Removal

3-1-8 Ass'y Rear Removal

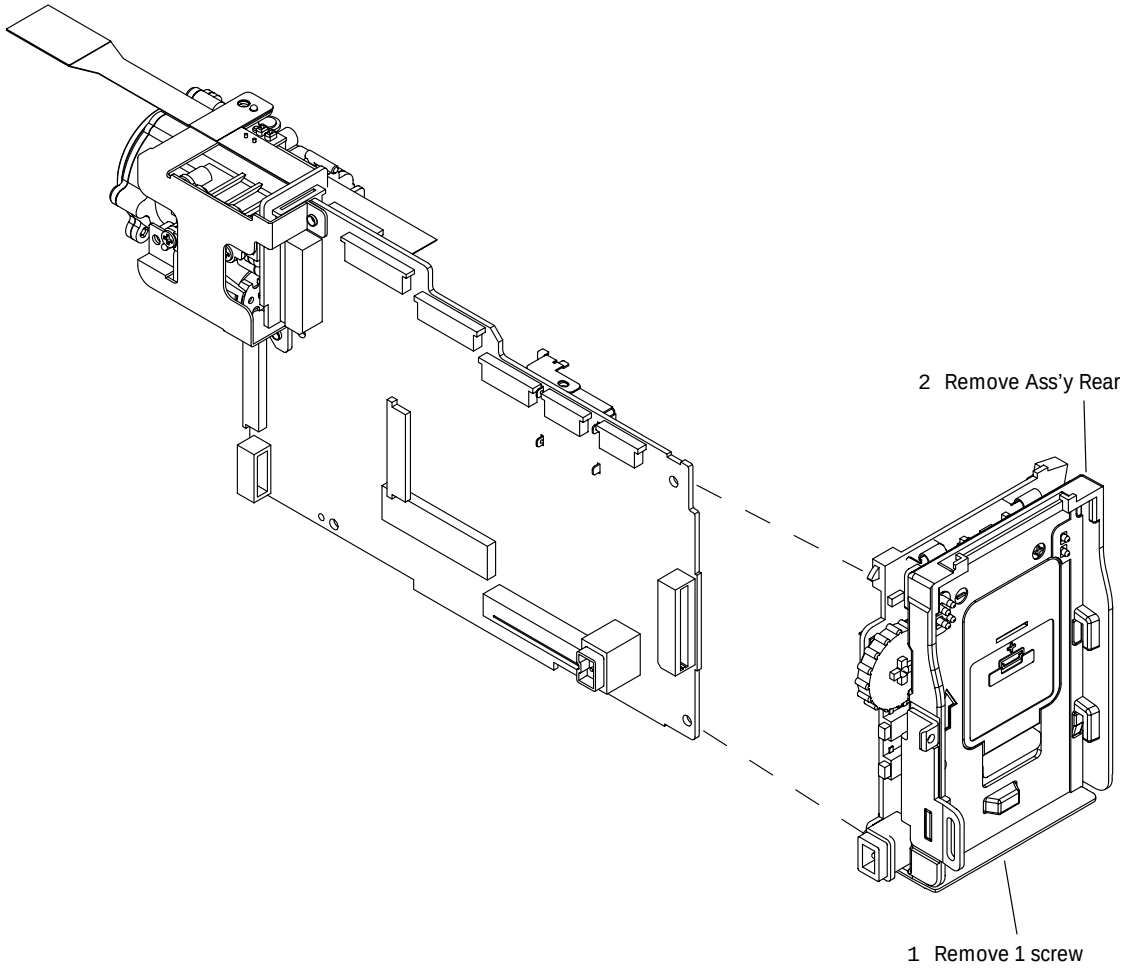

Fig. 3-8 Ass'y Rear Removal

3-1-9 Ass'y Right Removal

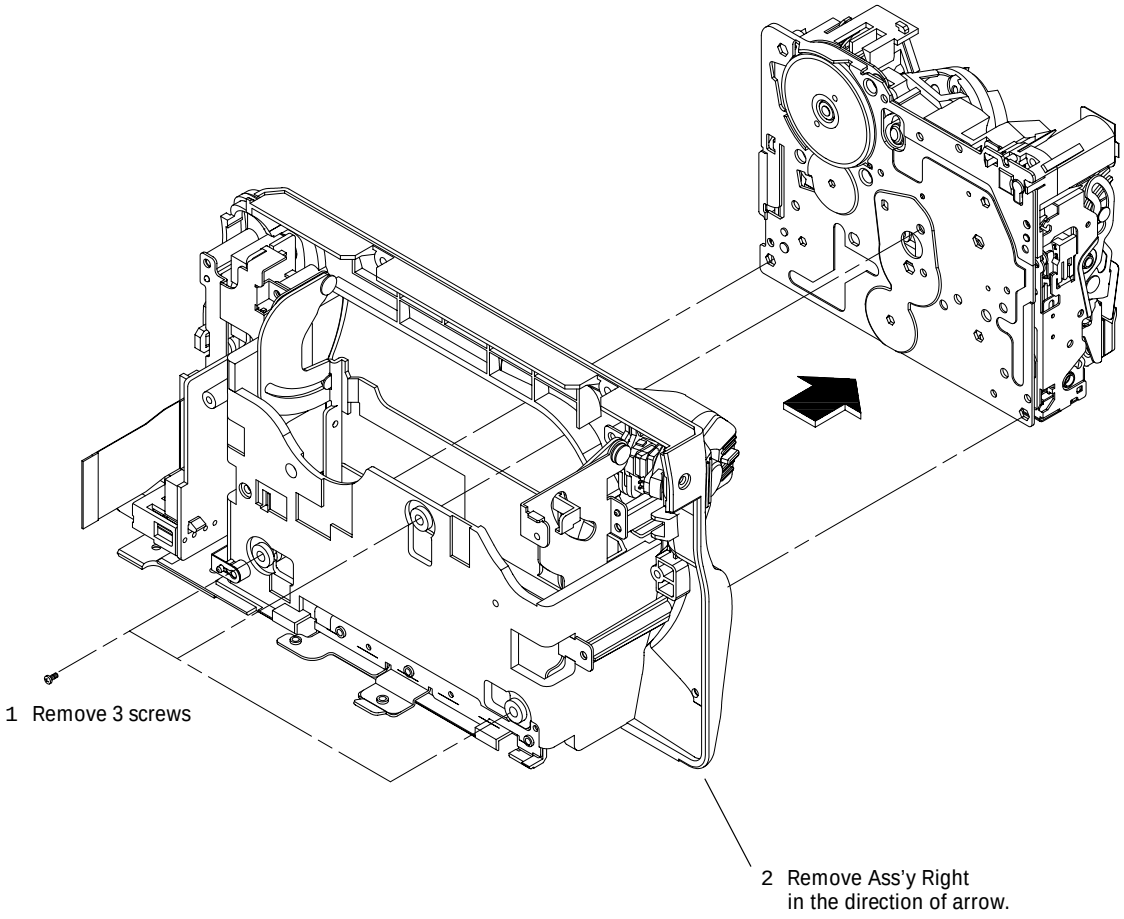

Fig. 3-9 Ass'y Right Removal

MEMO